

KT1250 RESIDENTIAL SERIES: Pocket in a Box - Medium Duty Model

KT25TRACK with Axle Wheels - Max door weight: 100 lbs (45 kg)


Knock Down Pocket Door Frame with Track And Hardware Kit

For 4-1/2" (114.3mm) Wall • KT1258 also available for max door weight of 150 lbs (60 kg) using KT25TRACK and KT28HANGER with ball bearing wheels

ARCHITECTURAL SPECS

ROUGH OPENING (RO)	The width is calculated by multiplying the door width by two and add 1" (25.4mm) IE: 36" x 2 = 72" (914mm x 2 = 1828mm); 72" + 1" = 73" (1828mm + 25.4mm) opening Rough opening in height is 4" (101.6mm) more than door height
MAX DOOR WEIGHT	100 lbs (45 kg) – 2 hangers (KT1250) / Optional 150 lbs (60 kg) – 2 hangers (KT1258)
MIN AND MAX DOOR THICKNESS	3/4" (19mm) to 1-3/8" (35mm) • DOOR WIDTH: 24" (609mm) to 48" (1219mm)
DOOR HEIGHT	Up to 96" (2438mm) provided the door does not exceed 100 lbs (45kg) for KT1250 Series & 150 lbs (60kg) for KT1258 Series
VERTICAL ADJUSTMENT	3/8" (9.5mm) for KT1250 & KT1258
TRACK	Extruded aluminum, keyhole punched
HANGER	Steel construction zinc plated, 4 plastic wheels. KT1250 Series Axle, KT1258 series ball bearing
OPTIONS	KT177 privacy & KT178 passage latch for pocket doors
HARDWARE PACKS	Included in box for 1 door application. Consists of (poly-bagged) KT25HANGER-2 hangers, KT107-1 jamb mounted door guide, KT122-1 nail on bumper stop, KT155-1 wrench, KT143-2 bottom jamb spacer plates, KT144 -2 brackets for KD pocket door frame header, installation sheet plus all screws

NOTE: For biparting pocketing doors 2-KT126 intrack door stops required. KT28HANGER included in KT1258 Series hardware pack.

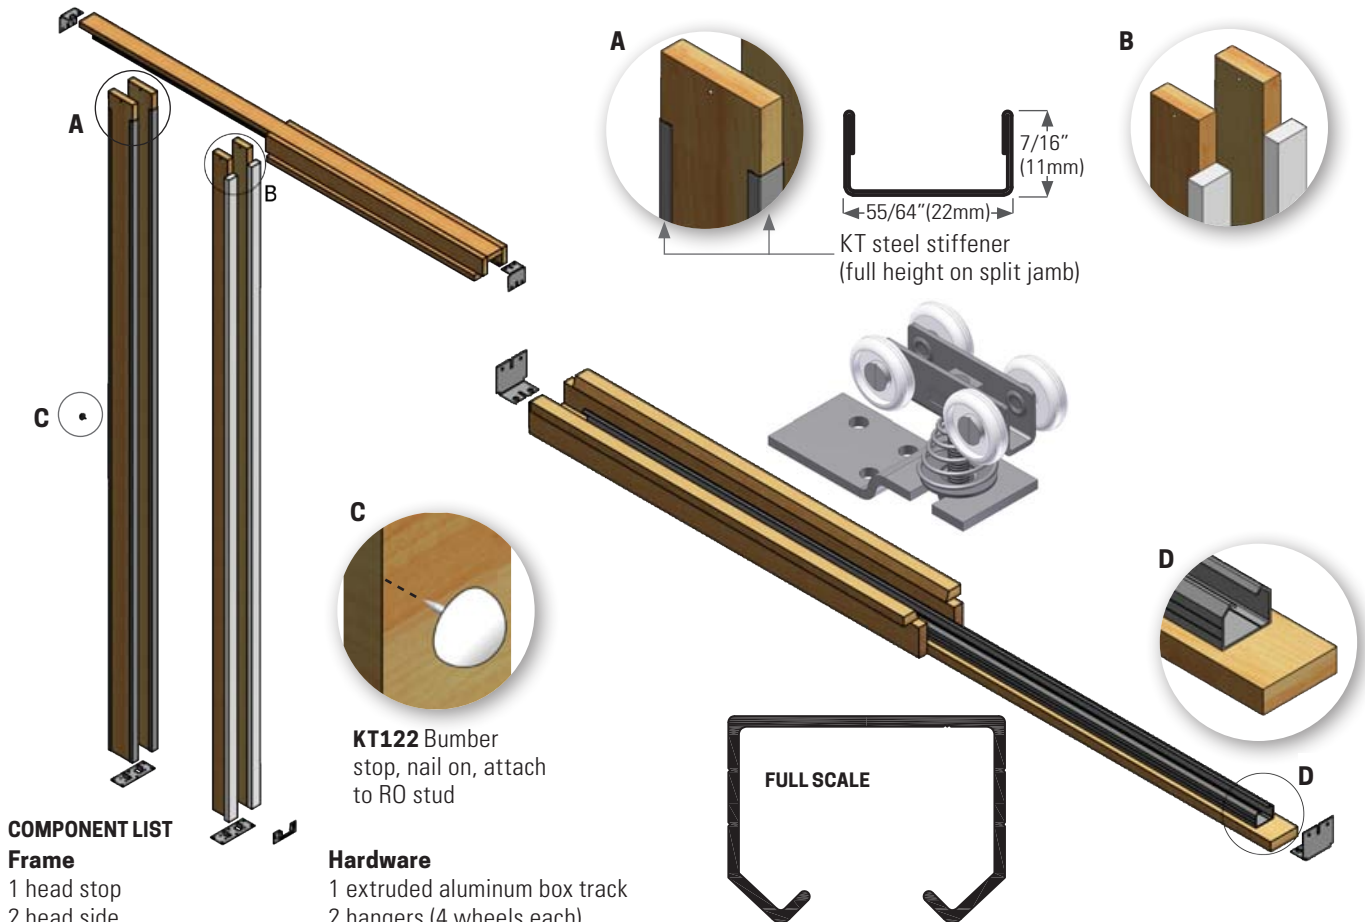

COMPONENT LIST

Frame

- 1 head stop
- 2 head side
- 2 bevelled head trim
- 2 split stud 1 x 4
- 2 split jamb 1 x 3
- 2 split jamb trim
- 4 galvanized steel stiffeners
- 1 nailing support board

Hardware

- 1 extruded aluminum box track
- 2 hangers (4 wheels each)
- 1 jamb mounted door guide
- 1 nail on door bumper
- 2 jamb spacer plates
- 1 fixed header end bracket
- 1 adjustable header end bracket
- 1 wrench, screws & instructions



KT25TRACK

NOTE: After installing pocket frames, replace all track screws with #8 x 1-1/2" (38mm) screws (included), before drywall.